 


How do I Change the Volume?


1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. The remote has an up/down toggle button labelled **VOL** located on the top right hand side. Press the **+** or **-** to increase and decrease the volume.

The volume will be displayed on the Front Display Window and will also appear on the screen.



3. There is a **MUTE** button located to the right of the **VOL** button on the remote. Pressing it will toggle the sound output on and off.

MUTE will be displayed on the Front Display Window and will also appear on the screen

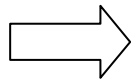

FOR MORE DETAILED INFORMATION REFER TO PAGE 43 OF THE MANUAL