

# How do I play a DVD?

*Note: The DP-S1 has a DVD Rom drive that can play DVD Movies. The DP-P1 and DP-H1 do not have a DVD Rom drive, but can play VOB files (the contents of a DVD) from the Network, USB or Memory Card.*

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen.
2. Press the **Eject** button on the remote to **open** the DVD Tray and place a DVD Rom in the tray.
3. Press the **Eject** button on the remote to **close** the DVD Tray.
4. Press the **FILE PLAY** button (next to **LIVE**) on the remote to bring up the **Media Player**.
5. Press the **◀▶ ARROW** keys to highlight **Movie**
6. Press the **▲▼ ARROW** keys to highlight **DVD** and press **OK**. Press **OK** to the confirmation pop-up.
7. Use the **◀▶ ARROW** keys to scroll forward and backwards through the file.
8. Use the **PAUSE** button on the remote to pause the playback. Use the **PAUSE** button to resume viewing. **Pause** is displayed on the screen (top right hand side).
9. Use the **STOP** button on the remote to stop playing the file.

*Note: You can also use the **FF** and **REW** and **SLOW FWD** buttons to move through the file. The **PLAY** button resumes normal play time. The **▲▼ ARROW** buttons will do **10%** jumps through the file.*

FOR MORE DETAILED INFORMATION REFER TO PAGE 79 OF THE MANUAL