

How do I play a file on the network?

Note: The DP-S1, DP-P1 and DP-H1 can play various file formats for movies, photos via network. Two or more Beyonwiz devices can even view each others files via the network. To play files over the network, your PVR needs to be connected to a network – refer to “How do I use the Ethernet Network?” to put your PVR on the network. You also need to have a Windows PC with shared files connected to the same network. The following formats are officially listed as supported:

Movie	wmv, avi, mpg, vob, mp4, asf, tp, trp
Music	mp3, wma, aac, ac3
Photo	bmp, jpeg, png

There is an unofficial list available on the Beyonwiz Forum at this link <http://www.beyonwiz.com.au/phpbb2/viewtopic.php?t=319>

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen.
2. Switch on your networked Windows PC
3. Press the **FILE PLAY** button (next to **LIVE**) on the remote to bring up the **Media Player**.
4. Press the **◀▶ ARROW** keys to move between **Movie**, **Music** and **Photo** (listed top left)
5. Use the **◀▶ ARROW** keys to highlight **Movie** and the **▲▼ ARROW** keys to highlight **Network** and press **OK**
6. Press the **▲▼ ARROW** keys to select the File Server you want to connect to and press **OK**.
7. Press the **▲▼ ARROW** keys to select the share you want to connect to and press **OK**.
8. Press the **▲▼ ARROW** keys to select the file you want to play and press **OK**.

Note: To move back through the folders, select the double dots “..” at the top of the list.

9. Use the **◀▶ ARROW** keys to scroll forward and backwards through the file.
10. Use the **PAUSE** button on the remote to pause the playback. Use the **PAUSE** button again to resume viewing. **Pause** is displayed on the screen (top right hand side).
11. Use the **STOP** button on the remote to stop playing the file.

*Note: You can also use the **FF** and **REW** and **SLOW FWD** buttons to move through the file. The **PLAY** button resumes normal play time. The **▲▼ ARROW** buttons will do **10%** jumps through the file.*

*Use the **◀▶ ARROW** keys to highlight **Music** or **Photo** to access those types of files from your Windows Share, and then use the **▲▼ ARROW** keys to highlight the file and press **OK** to play it.*

