

How do I set, edit or delete a Timer?

Note: You can set two overlapping timers on the DP-S1 and DP-P1 as they have two tuners, but not the DP-H, it has one tuner.

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. Press the **POP-UP** button on the remote and use the **ARROW** keys on the remote to select **Timer List** and press **OK**.
3. Press the **RED** button on the remote to **Add** a timer (or skip to steps 12 or 13 to edit or delete a timer)
4. Press the **OK** button on **Service** and use the **ARROW** keys to select the service you want to record, then press **OK**
5. Use the **ARROW** keys to highlight **Date**, and then use the number keys on the remote to enter the date.
6. Use the **ARROW** keys to highlight **Start Time**, and then use the number keys on the remote to enter the **Start Time**.
7. Use the **ARROW** keys to highlight **Duration**, and then use the **ARROW** keys to enter the **Duration**.
8. Use the **ARROW** keys to highlight **Reoccurrence**, and then use the **ARROW** keys to select:

Daily	Record every day at this time
Weekend	Record Saturday and Sunday
Weekday	Record Monday to Friday
Weekly	Record each week on the same day
Once	Record once only

9. Use the **ARROW** keys to highlight **File Name**, and then press **OK** on the remote to change the name.
10. Use the **ARROW** keys to highlight a **letter**, then the **OK** button to enter it. The letter should appear on the top line. Continue this process to create the file name.

When you've finished entering the new file name use the **ARROW** keys to highlight **Save and Exit** and press **OK**.

*Note: You can switch **Caps Lock** on and off using the **RED** button. The **Circle Arrow** button is **Backspace***

11. Use the **ARROW** keys on the remote to navigate down to **Accept** and press the **OK** button.

12. To **Edit** an existing Timer, use the **ARROW** keys to highlight it and press **OK**. Then follow steps 5 to 12.

13. To **Delete** an existing Timer, use the **ARROW** keys to highlight it, then press the **GREEN** button and use the **ARROW** buttons to highlight **YES** and press **OK**.

14. Press the **LIVE** button on the remote to resume normal viewing.

FOR MORE DETAILED INFORMATION REFER TO PAGE 57-59 OF THE MANUAL

