

## How do I delete a recorded file?

*Note: Once you have watched a recorded TV show, you may want to delete it to clear up space for future recordings. This tutorial assumes you already have some recorded files on the HDD.*

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. Press the **FILE PLAY** button (next to **LIVE**) on the remote to bring up the **Media Player**.
3. Press the **◀▶ ARROW** keys to move to **Movie** (listed top left)
4. Press the **▲▼ ARROW** keys to move to **HDD** and press **OK**.
5. Press **OK** to open the **recording** folder.
6. Use the **▲▼ ARROW** keys to highlight a file you want to rename and press the **POP-UP** button on the remote.
7. Use the **▲▼ ARROW** keys to highlight **Delete**
8. Press the **◀▶ ARROW** keys to move to **Yes** and press **OK**. The file will then be deleted.

