 


## How do I Change Channels?

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See “How do I do a Channel Scan?”
2. The remote has an up/down toggle button labelled CH located on the top right hand side. Press the + or – to toggle up and down the channels.

The channel name will be displayed on the Front Display Window and will also appear in the Information Box at the bottom of the screen.



3. You can also press the LIST button on the remote to bring up a list of the available channels. Use the ARROW keys to navigate the list and press OK to select the channel.



*Note: You can press the TV / Radio button to toggle between TV channels and Radio Channels.*

FOR MORE DETAILED INFORMATION REFER TO PAGE 39 OF THE MANUAL