

How to format a USB HDD

Note: Beyonwiz PVR units can only format external/USB Hard Disk Drives up to 500gb. Sizes larger than this size will need to be done with a third party application on a PC. The hard drive format is always FAT 32. The DP-S1, DP-P2 and DP-P1 have internal Hard Drives and can use external HDDs; the DP-H1 can only use an external USB HDD.

Formatting the hard drive will erase **EVERYTHING** on the drive

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. Connect your **USB** device to the box either through the front or rear USB port(s)
3. Press the **SETUP** button on the remote and use the **◀▶ ARROW** keys on the remote to navigate to the **System** option on the top bar (marked by two gears)
4. Use the **▲▼ ARROW** keys to move to **HDD** in the side menu and press **OK**
5. Now use the **▲▼ ARROW** keys to move to **Format USB HDD** the side menu and press **OK**
6. A box will pop up with a list of devices. Your device will be called "**Device**" followed by a number ie: "**Device1**" use the **▲▼ ARROW** keys to select the device and press **OK**
7. Use the **◀▶ ARROW** keys on the remote to select **Yes** and press **OK** to the **HDD Format warning**
8. The device will now be formatted and a prompt will come on the screen saying **Formatting**. Upon completion a prompt saying **Format Complete** will appear. Press the **OK** button to dismiss this window and continue

